



**OPERATION INSTRUCTIONS for the ComfortGeni Model: Geni 6xr with remote**

**READ AND SAVE THESE INSTRUCTIONS AND IMPORTANT NOTICE**

**INSTALLATION:**


**Floor registers 6"x10" or 6"x12"**

1. Remove the round cap on the grill top.
2. Route the plug end of the AC adapter through the round opening and plug into the underside of the Geni.
3. Place round cap with slot on the grill top.
4. Plug the AC adapter into the 120V AC wall outlet.
5. Follow the **Operation Settings**.
6. Remove the floor register and replace with the Geni.

**Wall or Ceiling registers 6"x10" or 6"x12"**

1. Drill (2) holes with a 3/16" drill bit from the bottom side of the Geni. The holes should be drilled in the pre-molded locations as pictured below.
2. Remove the round cap on the grill top
3. Route the plug end of the AC adapter through the round opening and plug into the underside of the Geni.
4. Place round cap with slot on the grill top.
5. Plug the AC adapter into the 120V AC wall outlet.
6. Follow the **Operation Settings**.
7. Remove the wall or ceiling register and replace with the Geni.

**Note:** If you choose to install the Geni, with the power wire concealed and plugged into the back of the fan unit, locate the necessary 120V AC wall outlet near the backside of the Geni then plug into the rear of the unit. Use the non-slotted grill cap to trim out the Geni top. Go to [www.comfortgeni.com](http://www.comfortgeni.com) for wire routing ideas.

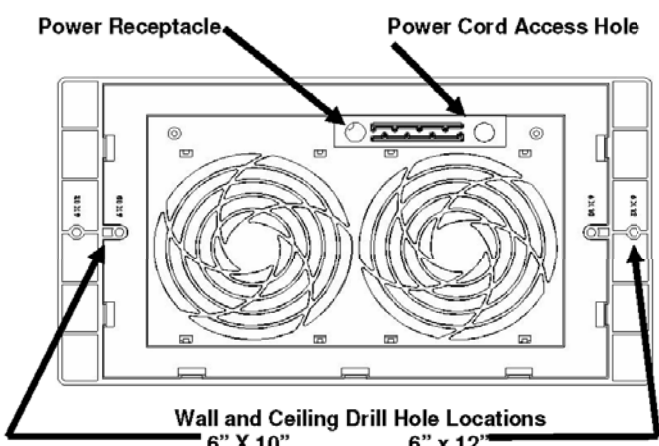

**The ComfortGeni model Geni 6xr should be installed in accordance with these instructions and where applicable, all local codes or in their absence in accordance with the latest editions of the International Residential Code and International Electrical Code. Do not install this unit in a fire rated wall or ceiling. Follow proper building codes.**

**READ AND SAVE THESE INSTRUCTIONS**

1. Your ComfortGeni will be as warm or cool as the air that is delivered from the heat or cooling source. The maximum temperature is 160F or 70C.
2. Do not, in any way, block the air grill of the ComfortGeni
3. Unplug the ComfortGeni when not in use. Turn the unit off before unplugging.
4. Do not operate the ComfortGeni with a damaged cord or if the unit malfunctions, becomes noisy when operating, has been dropped or otherwise damaged or if the housing is damaged or broken. Return the unit for inspection, replacement or repair.
5. The ComfortGeni should never be exposed to moisture. Avoid the use of the unit near an open window, bathroom or laundry area where it may come into contact with water.
6. The ComfortGeni is designed for indoor use only.
7. Place the ComfortGeni and the electrical cord where it will not be tripped over, out of the traffic pattern.
8. Never insert any object or allow any object to enter the ComfortGeni through the bottom or top grills, as this may damage the unit or cause it to malfunction.
9. Do not use the ComfortGeni near flammables such as gasoline, paint or natural gas.
10. The ComfortGeni is intended for use as described in the instructions only. Other use may cause fire, electrical shock, and damage to the unit or injury to persons and will void any warranty by the manufacturer.
11. If an extension cord is required, use a UL approved cord.
12. Pressure on the bottom or top grills of the ComfortGeni may cause the fan blades to contact these grills and damage the unit.
13. Do not use strong detergents or flammable liquids to clean the ComfortGeni.
14. The housing of the ComfortGeni is sealed at the factory. THERE ARE NO SERVICEABLE PARTS INSIDE. Attempting to open the housing will void any and all warranty.

**The ComfortGeni, Model Geni 6xr with remote control should be installed in accordance with these instructions and where applicable, all local codes or in their absence in accordance with the latest editions of the International Residential Code and International Electrical Code.**

**Comfort Geni LLC.  
1427 W. 86th St. Suite 328  
Indianapolis, IN 46260  
[www.comfortgeni.com](http://www.comfortgeni.com)  
(317) 650-5348**

**Operation Settings:**

**Mode Selections:**

- FAN (green) for continuous running
- HEAT (red) for automatic ON/OFF to boost warm air
- COOL (blue) for automatic ON/OFF to boost cool air




Display shows SET POINT temperature setting for HEAT and COOL

**FAN Speed Settings**

**REMOTE CONTROL INSTRUCTIONS**

- Press ON/OFF button to turn Geni on.
- Press MODE button for FAN (green) and select fan speed (Suggest HIGH to start.)
- For heating press the MODE button and select HEAT (red). Adjust SET POINT down until fans are on, then adjust SET POINT up until fans turn off. Unit is now set.
- For cooling press MODE button and select COOL (blue). Adjust SET POINT up until fans are on, and then adjust SET POINT down until fans turn off. Unit is now set.
- Return to INSTALLATION directions #6 or #7.

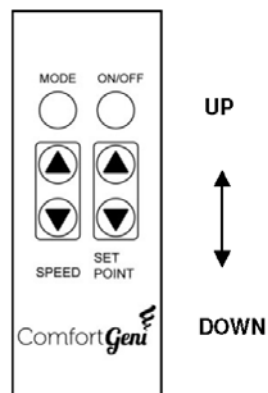

**IMPORTANT NOTES**

1. Fan speed light will flash when fans are running.
2. Fan speed can be set at any time. Fans do not have to be running.
3. Numeric display will go out 30 seconds after SET POINT is completed.
4. The numeric display will only be active in the Heat or Cool mode.
5. The numeric display will come on in Heat or Cool if any button is pressed.
6. The numeric display exhibits an approximate room temperature for the purpose of programming the electronic sensor.
7. To shorten the length of time your Geni runs after your forced air furnace or air conditioner has shut off
  - a. for HEAT raise the SET POINT temperature
  - b. for COOL lower the SET POINT temperature
8. If power fails or the Geni is turned off the Geni will automatically retain all settings.
9. If you are using the Geni 6xr to move warm air from room to room, you may need to adjust the Set Point trigger temperature to a higher setting for best operation.

**ONE YEAR LIMITED WARRANTY**

Subject to the following limitations Comfort Geni LLC (manufacturer) warrants that the Geni 6xr for one (1) year from date of original retail purchase, but not exceeding two (2) years from date of manufacture, remain free from appearance of defects in workmanship or materials.

This warranty is subject to the following limitations: (1) manufacturer's liability is limited to the replacement or repair of the unit, as decided by the manufacturer; (2) a defective unit must be returned, prepaid with proof of purchase; (3) This warranty does not apply to defects resulting from the alteration, abuse, accidental damage, unauthorized repair or misuse of the unit.

This warranty is given in lieu of all other warranties, guarantees and conditions on manufacturer's part and the manufacturer shall have no tortious or other liability in respect to this Geni 6xr

By purchasing this product, the consumer agrees that, to the maximum extent permitted by law, ComfortGeni, LLC, is not responsible for direct, special, incidental, or consequential damages resulting from any breach of warranty or condition, or the consumer's use or misuse of the product, or under any other legal theory.

Comfort Geni LLC reserves the right to change product specifications without notice.

**For moving air room-to –room or level-to-level consider using the duct kit accessory shown below. This accessory is sold separately.**

